



Order Number: Suction filter for Zfx Inhouse5x ZFX02010000


1. Open the cover on the right sight of the machine by replacing the 4 screws or use the key for the cabinet door.

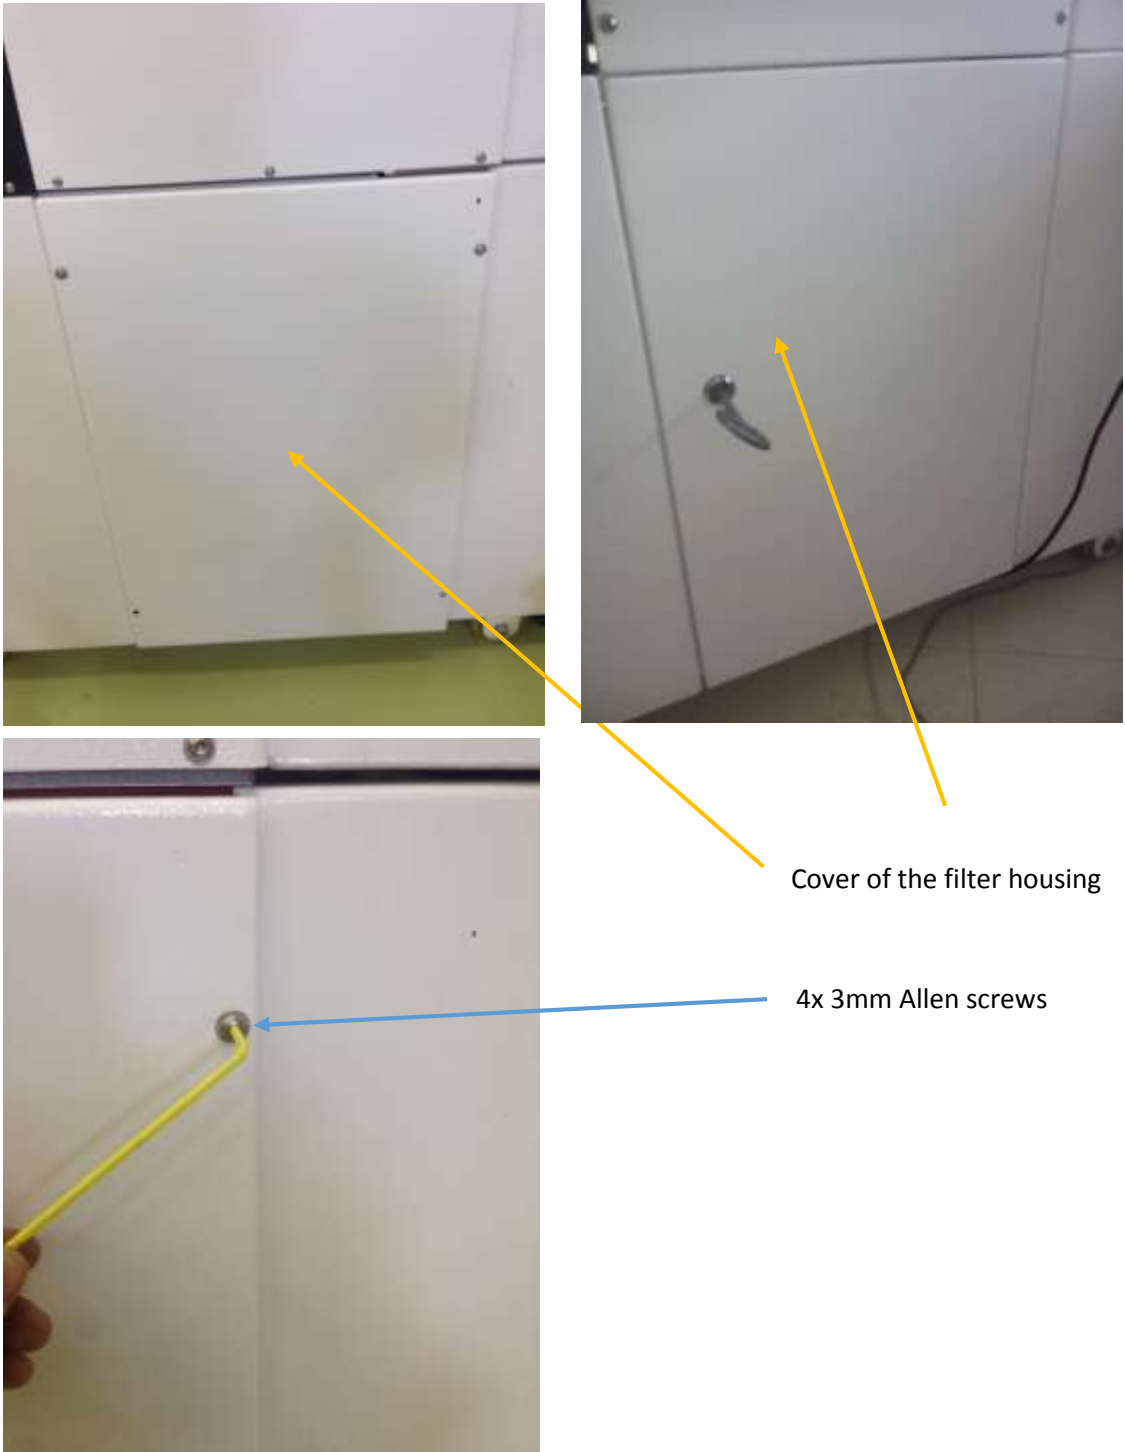


2. Unscrew the lock nut counterclockwise completely to the top

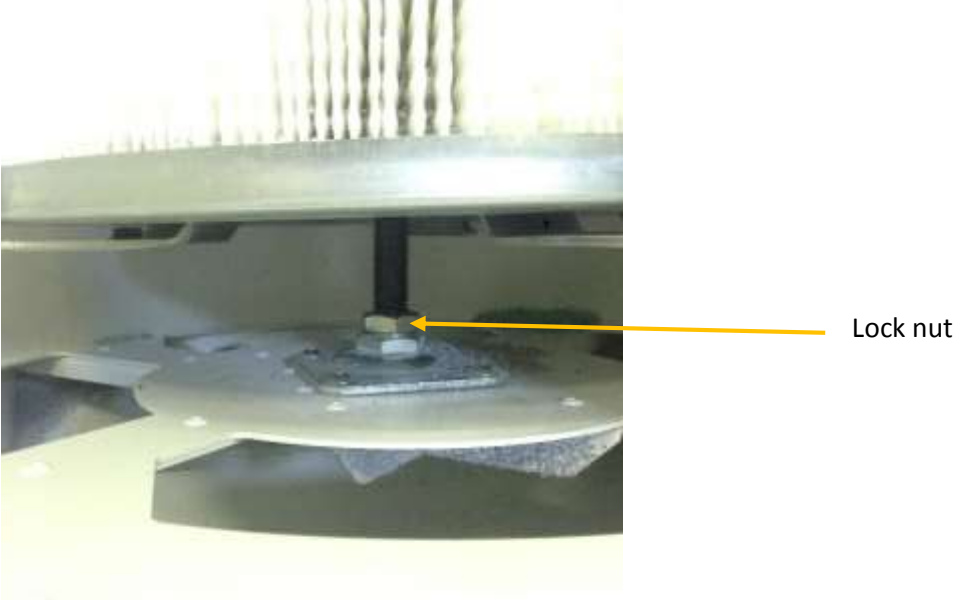

3. screw the plate of the filter clockwise completely to the bottom

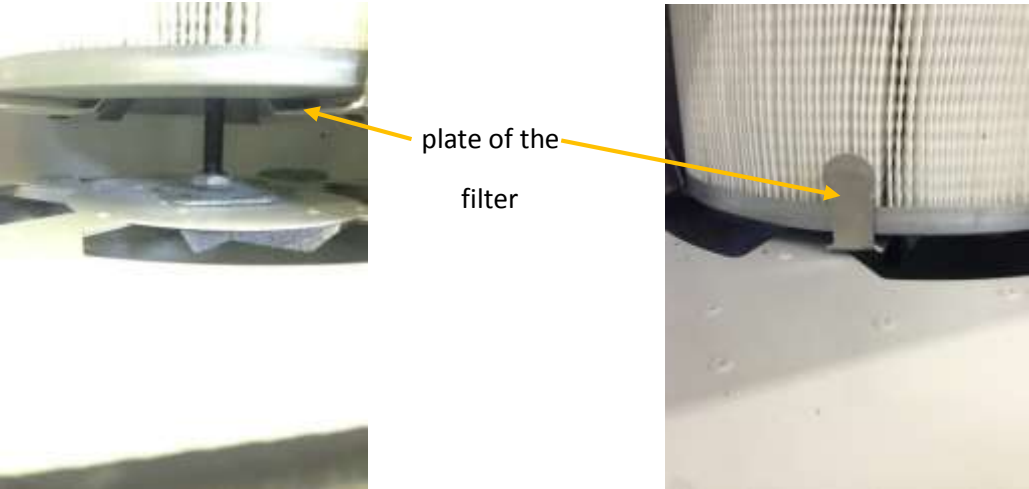

IFU	Replacing Suction Filter Zfx™ Inhouse5x	
Valid from 2015-09-22		Rev. 1 Page 3 of 3

4. Remove the suction filter



5. To reassemble, proceed in the reverse order